

# Debbie Meyer CakeCutters™

## Congratulations!!

You are now the proud owner of *Debbie Meyer*™ cakecutters®.

Your unique *Debbie Meyer*™ cakecutter® is easy to care for and is “top-rack” dishwasher safe. The V-shaped *Debbie Meyer*™ cakecutter™ is for round cakes and the U-shaped (sheet) cakecutter™ is for sheet cakes.

When using you “V” shaped *Debbie Meyer*™ cakecutter®, do not force the stainless steel blade to open too wide as damage may occur. Gently open the blades for larger slice of cake, or close to reduce the size of the slice.

When using your “U” shaped *Debbie Meyer*™ cakecutter®, you can choose the size of the slice by deciding how far in, from the edge of the cake, you want to cut your slice. For a small piece of cake, place the front edge of the blade at the size you wish to cut. For a larger slice, go further into the cake.

To cut your cake, simply slide the *Debbie Meyer*™ cakecutter® blade gently through the cake from top to bottom. Then, gently squeeze the handles together to lift the slice out cleanly and effortlessly!

The *Debbie Meyer*™ cakecutter® has no sharp edges, so it's both SAFE and EASY to use!!

Enjoy! - *Debbie Meyer*™ -- Inventor and Designer

Look for my other unique and useful products on [www.debbiemeyer.com](http://www.debbiemeyer.com).

Exclusively distributed by International Home Shopping.

Toll Free 1-888-830-9425